

YARD RAMP USER GUIDE

MOBILE YARD RAMP INSTRUCTIONS:

STAGING THE RAMP FOR USE

- 1) TWIST AND LOCK TOW BOOT INTO SLOT PROVIDED AT ENTRANCE OF RAMP
- 2) ADJUST FORKS TO FIT INTO POCKETS OF TOW BOOT AND DRIVE IN
- 3) ATTACH TOW BOOT CHAIN TO FORKLIFT (CARRIAGE WILL BE FINE)
- 4) LIFT RAMP AND MOVE RAMP TO CONTAINER LOCATION
- 5) RAISE LANDING GEAR TO CLEAR EDGE OF CONTAINER AND MOVE RAMP SO LIP IS COMPLETELY ON CONTAINER
- 6) LOWER RAMP ONTO CONTAINER SO RAMP LIP IS RESTING ON CONTAINER MAKING SURE WHEELS ARE OFF THE GROUND ABOUT 2 TO 3 INCHES
- 7) ATTACH SAFETY CHAIN BY LOOPING THROUGH CONTAINER AND ATTACH TO WELDED HOOKS ON YARD RAMP
- 8) REMOVE TOW BOOT
- 9) YOU ARE NOW READY TO LOAD AND UNLOAD PRODUCT

NOTE : NEVER DRIVE UP RAMP WITH WHEELS ON THE GROUND AS THEY ARE DESIGNED ONLY FOR WEIGHT OF THE RAMP

DE-STAGING THE RAMP

- 1) REMOVE SAFETY CHAINS FROM CONTAINER
- 2) LOWER LANDING GEAR SO LIP IS COMPLETELY OFF THE EDGE OF CONTAINER
- 3) TWIST AND LOCK TOW BOOT INTO SLOT PROVIDED AT ENTRANCE OF RAMP
- 4) ADJUST FORKS TO FIT INTO POCKETS OF TOW BOOT AND DRIVE IN
- 5) ATTACH TOW BOOT CHAIN TO FORKLIFT (CARRIAGE WILL BE FINE)
- 6) LIFT RAMP A FEW INCHES AND MOVE TO DESIRED LOCATION

MAINTENANCE:

ROUTINE MAINTENANCE REQUIRES GREASE ADDED TO THE ZERK FITTING ON WHEELS AS NEEDED

ANNUAL MAINTENANCE REQUIRES THE RAMP TO BE INSPECTED TO LOCATE ANY CRACKS OR FATIGUE ON YARD RAMP AND TO BE REPAIRED IMMEDIATELY. CONTACT THE MANUFACTURER AT 877-463-3546.



SANTA FE SPRINGS, CA 90670